


Shower kit installation guide.

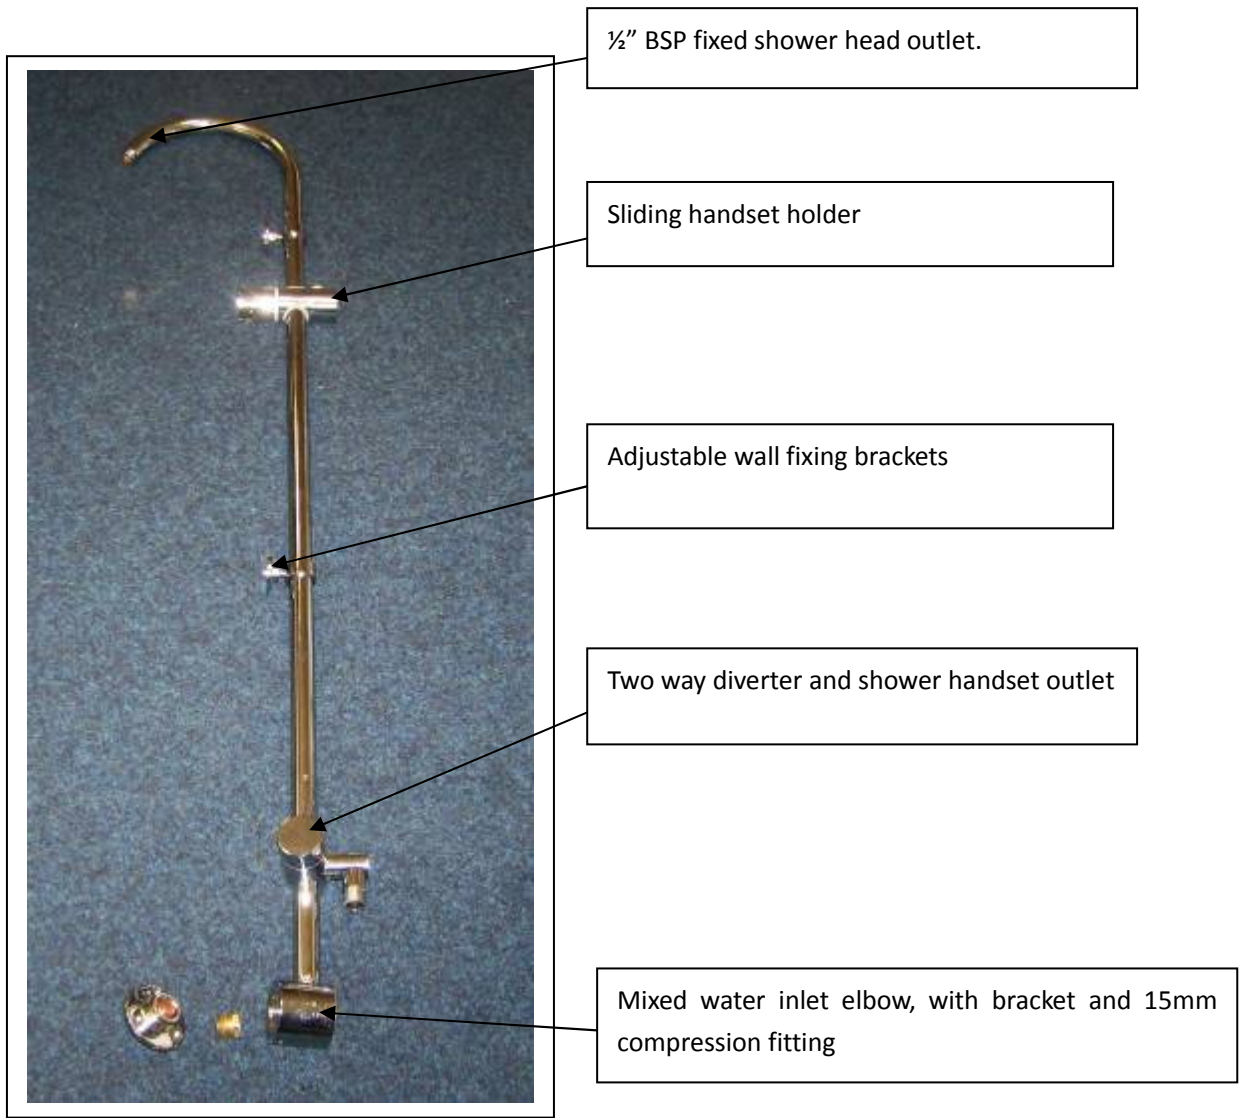

1. Mark out the positions required for the mixed water inlet elbow, and the adjustable wall fixing brackets.
2. To install the mixed water inlet elbow please see figure 2.
3. Connect the tubes together as shown in diagram, and fix adjustable brackets see figure 3.
4. Connect the shower hose and handset to the handset outlet using the rubber washers.
5. Connect the fixed shower head to the outlet using rubber washer.
6. Check for leaks.

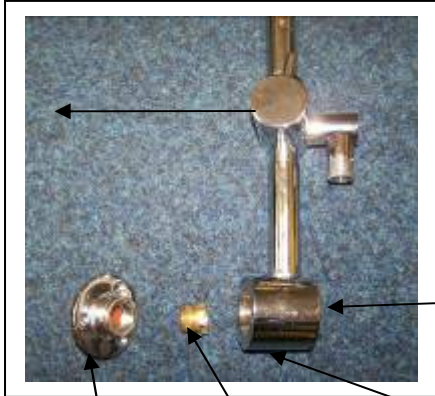


Fig.2. Push the chrome bracket over the exposed water inlet pipe and screw to the wall leaving some exposed pipe. Create a water compression seal by using the brass connector and nut and olive supplied. Finally push the chrome inlet elbow and riser over the chrome bracket and secure by tightening grub screw located underneath.

Chrome bracket

Brass connector

Chrome inlet elbow

Grub screw



Fig.3. Secure the wall bracket in pre-marked position by screwing to the wall. Screw the threaded peg into the tube ring. Cut the peg to length to gain the desired projection from wall. Push the exposed end of the peg into the wall bracket and secure with grubscrew. Repeat for the other wall fixing.

Tube ring

Threaded peg

Wall bracket with grub screw

Customer care Helpline – 01282 446789