

'AQ' HINGED DOOR FITTING INSTRUCTIONS

(Recess Installation)

1. Ensure the shower tray is level and check adjustment sizes given are correct for fitment to application. Care must be taken when drilling the wall to avoid hidden pipes or electrical cables (Fig 1).
2. Take the wall posts and set them 15mm from the edge of the tray at either side of the recess. Using a spirit level ensure the wall posts are vertical, plumb and in line with each other (Fig 2). Mark the hole positions (Fig 3) remove the wall posts and drill the holes and fit the wall plugs.
3. Re-position wall posts and secure to the wall using 30mm screws, ensuring that the screw collars are in place.
4. Fit the hinged door into the wall post channel (Fig 4). Fit the door post into the opposite wall post (Fig 5). Measure and trim to length the magnetic strip and slide into the door post making sure that the magnet is facing outwards (Fig 6).
5. Clip the magnetic seal onto the edge of the glass door. Align the door and door post so that they close together and are in line. Then when everything is central, mark 150mm from the top and bottom of the posts at either side and drill a 3.2mm hole through both sections from the inside of the enclosure (Fig 7). Secure using the 10mm screws ensuring that the screw collars are in place.
6. Trim to length and fit the 'D' strip using silicone to fix in place (Fig 8) Measure and trim to length the bottom door seal and clip into place with the anti splash blade on the inside of the enclosure.
7. Finish off by fitting the door handle, screw cover caps and run a bead of silicone around the bottom and up the vertical sides of the wall posts to seal the outside of the unit (Fig 9). Fit the snap to fit cover caps onto the top edges of the wall channels.

DO NOT SEAL ON THE INSIDE OF THE ENCLOSURE

Fig. 1



Fig. 2



Fig. 3

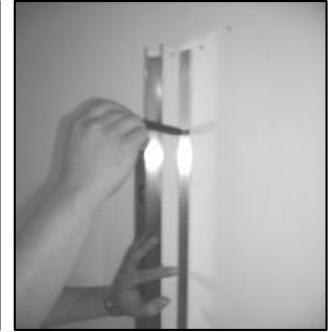


Fig. 4

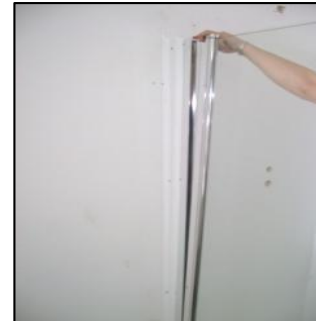


Fig. 5

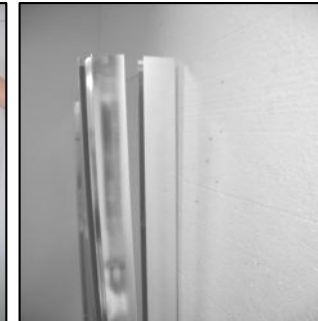


Fig. 6

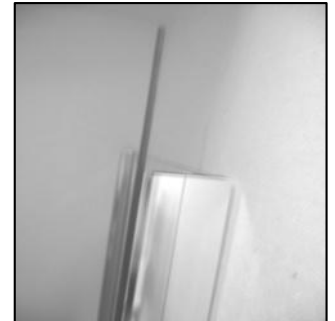


Fig. 7



Fig. 8

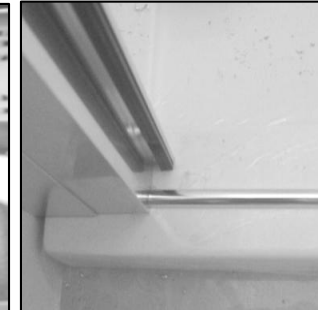


Fig. 9



'AQ' HINGED DOOR FITTING INSTRUCTIONS

(Side Panel Installation for Hinged Door)

WHEN THE HINGED DOOR IS TO BE FITTED WITH A SIDE PANEL, FOLLOW THE INSTRUCTIONS FOR THE SIDE PANEL IN CONJUNCTION WITH THOSE BELOW.

8. Follow the fitting instruction for the side panel. Insert the door post into the corner post of the side panel (Fig 10) with the magnetic strip channel facing outwards. Insert the magnetic strip as previously described. Fit the hinged door as in Fig.4 and clip the magnetic seal onto the glass door edge. Align both door and side panel making sure everything is square and plumb and that the door operates correctly. Secure as in Fig 7 above.
9. Assemble the end stop and door post cover cap by using the central hole in the end stop and the hole in the end cap. Screw together using the 12mm M/C screw (Fig 11). Place the end stop over the corner and door post assembly (Fig 12).
10. Measure and trim the wall bar to length. With the wall bar in place, level and mark the position of the wall bracket (Fig 13). Mark the hole centre, drill and plug. Fix the wall bracket in place using the 30mm screws (Fig 14). Loosen the end stop assembly, replace the wall bar and re-assemble as in Fig 15.
11. Finish off by fitting the door handle, screw cover caps and run a bead of silicone around the bottom and up the vertical sides of the wall posts to seal the outside of the unit (Fig 9) Fit the snap to fit cover caps onto the top edges of the wall channels and corner post. Some trimming may be required.

DO NOT SEAL ON THE INSIDE OF THE ENCLOSURE

SHOWER HEAD SHOULD ALWAYS BE FITTED ADJACENT TO THE DOOR.

Fig. 10



Fig. 11



Fig. 12



Fig. 13



















Fig. 14



Fig. 15



AQ HINGED DOOR PARTS LIST		
	DRIP STRIP	1
	MAGNETIC STRIP	1
	MAGNETIC SEAL	1
	30mm SCREWS	6
	WALL PLUGS	6
	SCREW COLLAR	10
	SCREW COVER CAP	10
	10mm SCREWS	4
	15mm SCREWS	2
	DOOR HANDLE	1
	BOTTOM DOOR SEAL	1
	12mm x M5 M/C SCREW	1
	WALL BRACKET	1
	WALL BAR	1
	END STOP	1
	DOOR POST COVER CAP	1

