

'AQ' D-SHAPED QUADRANT FITTING INSTRUCTIONS

1. Fit the shower tray ensuring it is level across all areas (Fig 1/2).
Apply silicone sealant to the edges of the tray before and after tiling.
2. Assemble the frame by fixing the top & bottom rails to the fixed glass panels and fix in position screwing through the aluminium posts into the rails using the 40mm screws (Fig 3/4).
3. Fit the glass clamps using the 10mm counter sunk screws (Fig 5).
4. Attach the wall posts to the frame and carefully lift the enclosure onto the shower tray and centralise. Mark the positions of the wall posts and remove the enclosure. Using a spirit level ensure that the wall posts are vertical and plumb (Fig 6). Mark the hole positions (Fig 7), remove and drill for wall plugs, then fit the plugs. Ensure that the screw collars are fitted to the screw beforehand.
5. Locate the enclosure into the wall posts and adjust so that it follows the profile of the tray, easing the frame in/out of the wall posts (Fig 8/9). Taking care not to scratch the unit, mark and drill two 3.2mm holes 150mm from the top & bottom on the inside of the enclosure through the wall posts and frame (Fig 10). Secure with the 10mm screws, again ensuring that the collars are in place.
6. Fix the wheels into the top & bottom holes in the glass door (Fig 11). The wheels are fitted to the door first and then slotted into the track via the central cut-out in both the top & bottom rails (Fig 12/13). If the door does not run true, final adjustment can be made by adjusting the top & bottom wheels. Slacken the retaining nut and adjust up and down accordingly. Re-tighten the nut.
7. Fit the rubber door stops using the 10mm round headed screws (Fig 14).
8. Cut to length the water seals to the fixed glass panel and the longer seals to the doors (Fig 15/16).
9. Cut to length the magnetic strips to the inner edges of the doors. If they repel, flip one of the strips around the other way (Fig 17).
10. Cut to length the bottom gasket seal to the outer face of the fixed glass panel. Slacken and re-tighten the glass clamp as necessary (Fig 18).
11. Finish by fitting the handles, decorative caps supplied and apply silicone down the vertical edges of the wall channel, and the bottom edge between the bottom rail and tray (Fig 19/20).

DO NOT SEAL THE ENCLOSURE ON THE INSIDE OF THE ENCLOSURE!

Fig. 1



Fig. 2

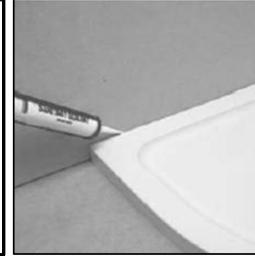


Fig. 3

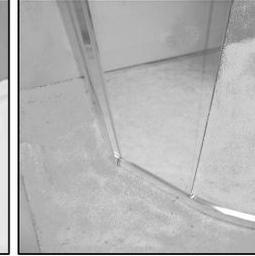


Fig. 4



Fig. 5

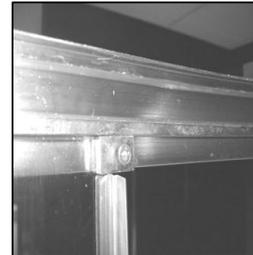


Fig. 6



Fig. 7

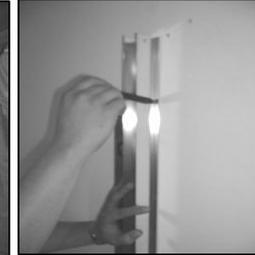


Fig. 8

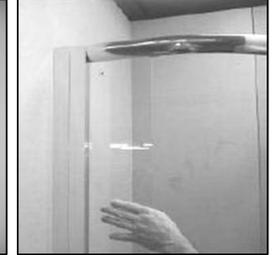


Fig. 9



Fig. 10



Fig. 11



Fig. 12

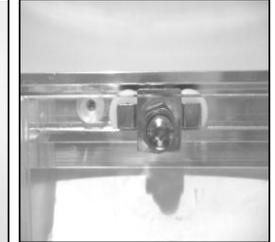


Fig. 13



Fig. 14

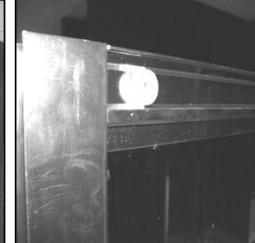


Fig. 15



Fig. 16



Fig. 17



Fig. 18




Fig. 19





Fig. 20



AQ 'D' SHAPED QUADRANT FITTING INSTRUCTION

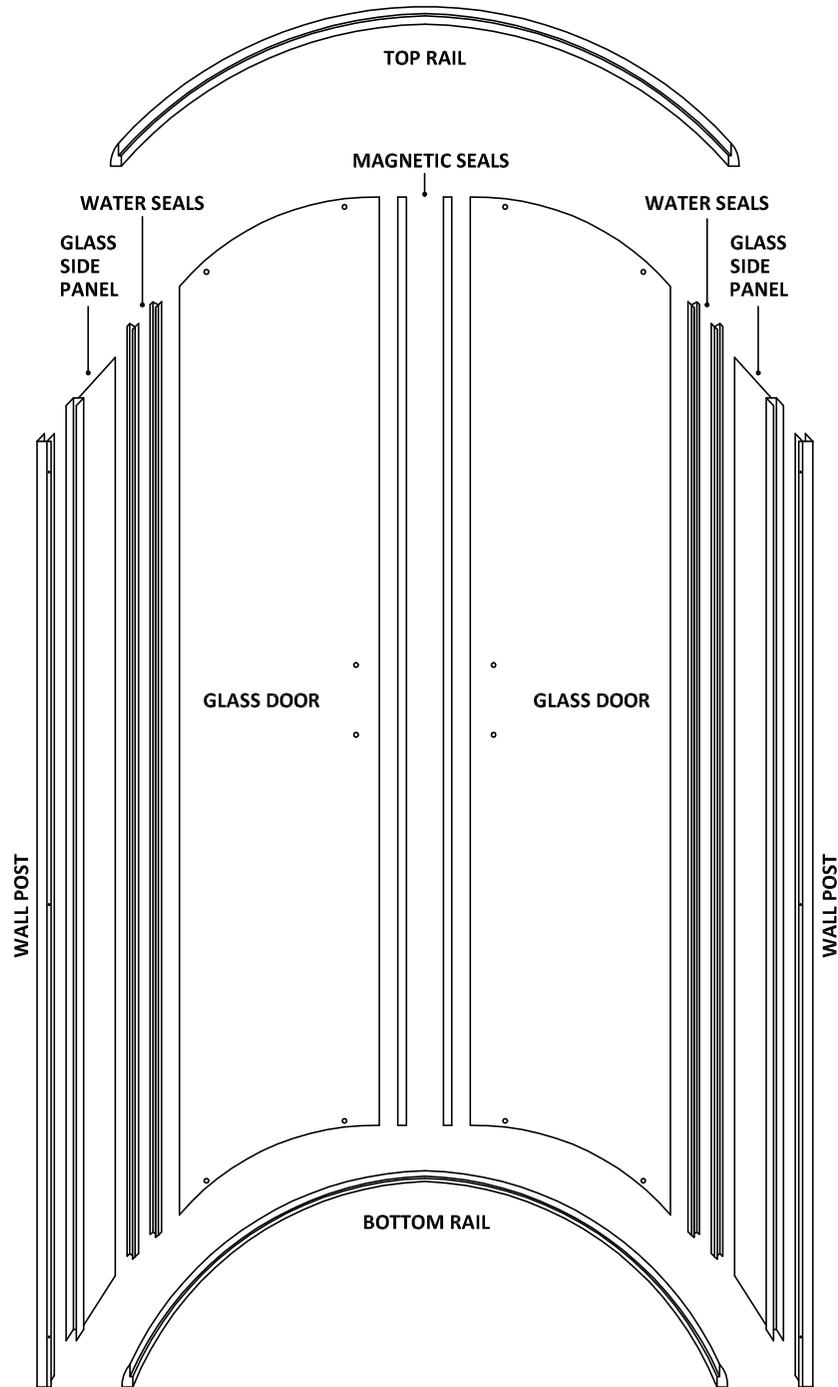

AQ D-SHAPED QUADRANT PARTS LIST		
	MAGNETIC SEAL	2
	VERTICAL SEAL	4
	BOTTOM GLASS SEAL	1
	SCREW COLLAR	10
	SCREW COVER CAPS	10
	GLASS CLAMP	4
	RUBBER DOOR STOP	8
	WALL PLUGS	6
	40mm SCREWS	8
	30mm SCREWS	6
	10mm R/H SCREWS	12
	10mm C/S SCREWS	4
	FIXED WHEEL ASSEMBLY	8
	WALL POST COVER CAPS	2
	DOOR HANDLE	2