


BATH SCREEN INSTALLATION GUIDE

PACKING LIST:

(Please carefully check the packing list to ensure that all parts are included before proceeding with the assembly).

GLASS BATH SCREEN	x 1
ADJUSTABLE WALL CHANNEL	x 1
BOTTOM WATER SEAL	x 1

WALL PLUGS	x 3
30mm x 4mm SCREWS C/SUNK	x 3
10mm x 4mm SCREWS C/SUNK	x 3
INNER SCREW SUPPORT CUP	x 3
DECORATIVE SCREW COVER CAP	x 3

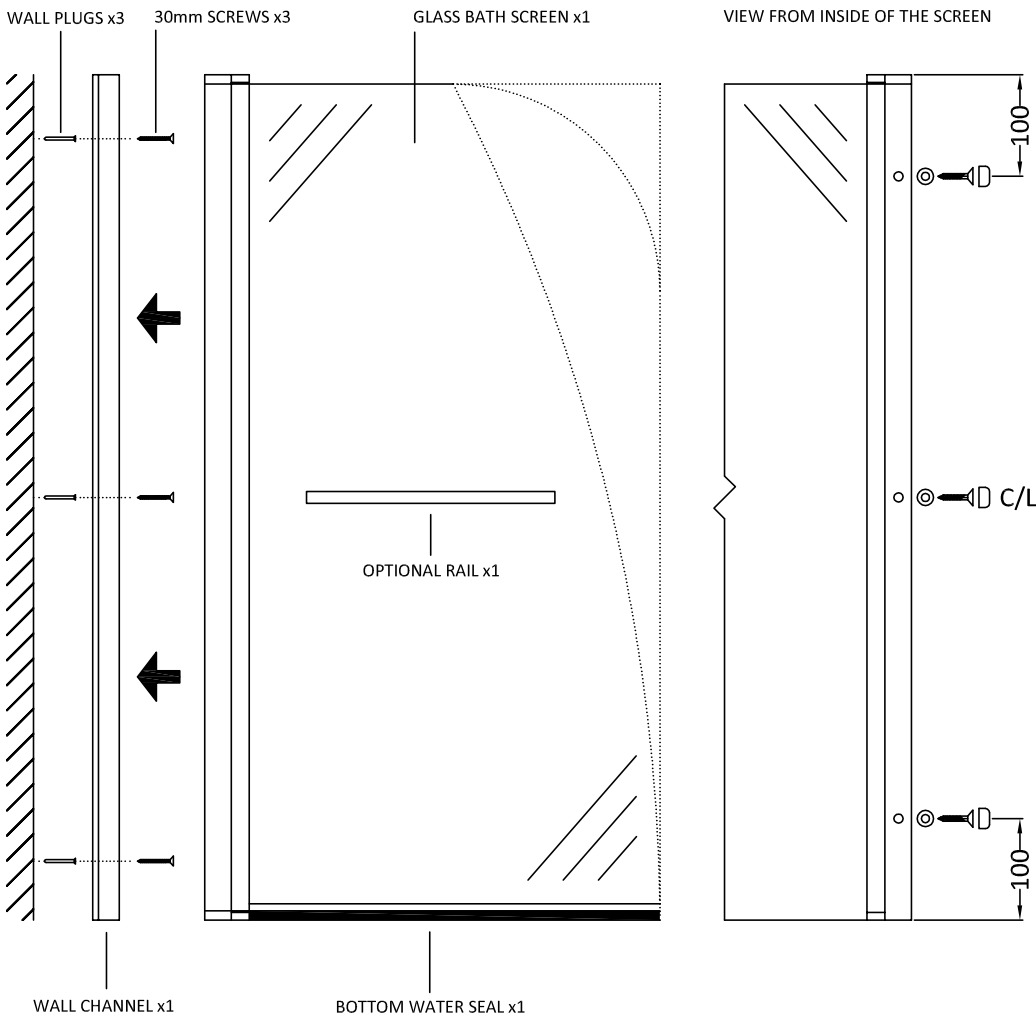

STEP 15 - BOTTOM SEAL FITTING

IT IS RECOMMENDED THAT A SMALL BEAD OF SILICONE IS APPLIED FROM THE TOP EDGE OF THE SEAL ON THE INSIDE APPROX 150mm IN AN UPWARDS DIRECTION.

CUT THE BOTTOM DOOR SEAL ON AN ANGLE SO THAT IT SITS TIGHT UP AGAINST THE BARREL HINGE. THEN TRIM TO LENGTH ON THE OPEN SIDE OF THE SCREEN.

INSTALLATION STEPS:

1. Insert the Screen Side Pillar into the Wall Channel.
2. When the Bath Screen has been aligned, mark the position of the Wall Channel on the wall. Remove the Screen, re-align the Wall Channel and mark the Wall Channel screw hole positions on the wall.
3. Using a 4mm Masonry Drill Bit, Drill 3 x 35mm deep holes in the marked screw positions on the wall.
4. Insert the 3 x Wall Plugs into the holes. Using a hammer knock them in until they are flush with the wall.
5. Attach the Adjustable Wall Channel to the wall using 3 x 30mm Screws supplied.
6. Insert the Side Pillar into the Wall Channel.
7. Adjust the position of the Bath Screen Assembly until it is level (Parallel) with the bath.
8. From inside of the Bath Screen Assembly, make a mark in the Wall Channel approx' 100mm from the Top. Note: The Wall Channel Design, allows for Shower Screens to be adjusted so that they can be used on wall surfaces that are not vertical. When marking the hole position, please check to ensure that the drilled hole will go through both the Wall Channel and the Side Pillar.
9. Using a 3.2mm Diam' HS Twist Drill bit, drill 1 Hole through the upper marked hole position. The hole must be drilled through the Wall Channel & Side Pillar until it reaches the centre. **DO NOT DRILL THROUGH BOTH SIDES**
10. Secure the upper section of the Wall Channel to Side Pillar by using 1 x Inner Screw Support Cup and 1 x 10mm screw. (Do Not Over Tighten)
11. Ensuring that the Bath Screen is still aligned as required, mark the position of the lower bath Screen Support Screw position approx' 100mm from the bottom of the Wall Channel.
12. Repeat Items 9 & 10 for lower Bath Screen Support Screw position.
13. Mark the centre support screw position approx' equal distance between Top & Bottom Screws and Repeat steps 9 & 10.
14. Fit the Screw Caps x 3 onto the Inner Screw Support Cups.
15. Fit the Bottom Water Seal x 1 and assemble to lower edge of Screen (See detailed instruction above)
16. It is recommended that a bead of silicone is run down the length of the wall channel and around the screen barrel on the outside of the bath Screen.
17. If a rail is to be fitted, please ensure that it is fitted to the outside of the Bath Screen only.



BATH SCREEN with FIXED PANEL INSTALLATION GUIDE

PACKING LIST:

(Please carefully check the packing list to ensure that all parts are included before proceeding with the assembly).

BATH SCREEN PANEL ASSEMBLY	x 1
ADJUSTABLE WALL CHANNEL	x 1
BOTTOM WATER SEAL	x 1
BOTTOM WATER SEAL (200mm)	x 1
ALLEN KEY	x 1

WALL PLUGS	x 4
30mm x 4mm SCREWS C/SUNK	x 4
10mm x 4mm SCREWS C/SUNK	x 3
INNER SCREW SUPPORT CUP	x 3
DECORATIVE SCREW COVER CAP	x 3

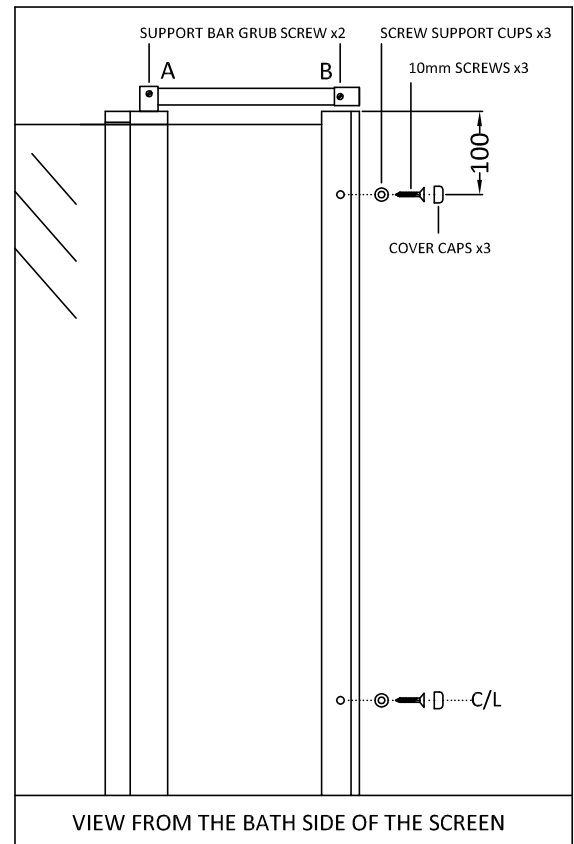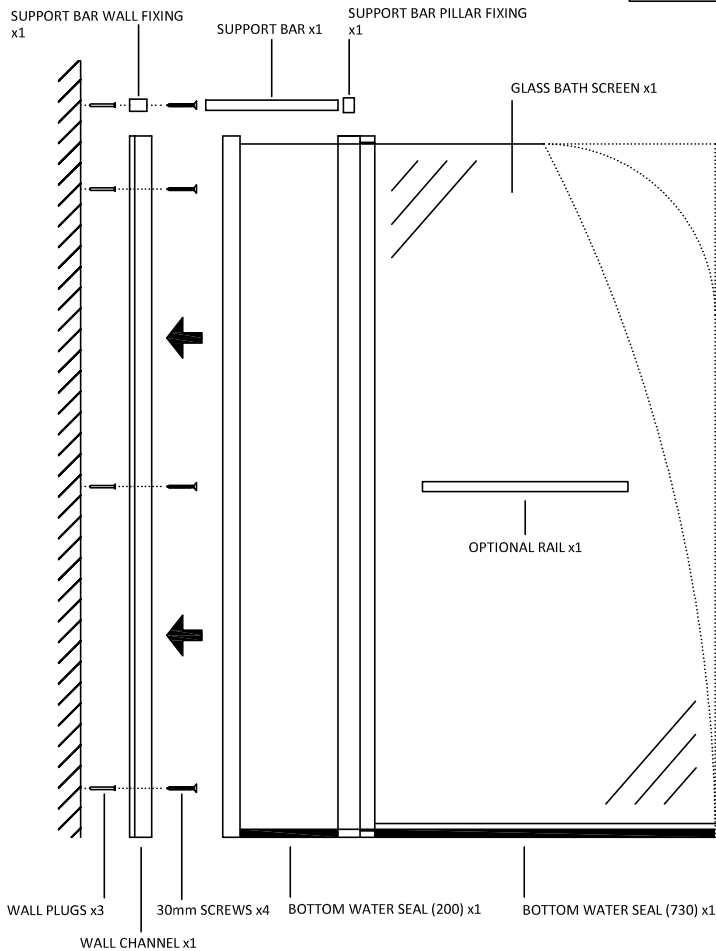

INSTALLATION STEPS:

1. Fit the Fixed Screen water seal (200mm) by measuring the glass and cutting the seal to length ensuring a tight fit to prevent water leaks. Fit the seal to lower edge of Fixed Screen.
 2. The Top Bar Assembly (x1) contains (x1) Top Bar & (x2) Fixings. The fixings are fastened to the Top Bar with Grub Screws. Loosen these so that the fixings can be removed.
 3. Remove pre-assembled 40mm screw from Top Hinge. Fit the Top Bar Fixing using the removed screw, into the top edge of the Fixed Panel (Position A)
 4. Insert the Bath Screen Side Pillar into the Wall Channel.
 5. When the Bath Screen has been aligned, mark the position of the Wall Channel on the wall. Remove the Screen, realign the Wall Channel and mark the Wall Channel screw hole positions on the wall.
 6. Using a 4mm masonry drill bit, Drill 3 x 35mm deep holes in the marked Screw positions on the wall.
 7. Insert the 3 x Wall Plugs into the holes, using a hammer to knock them in until they are flush with the wall.
 8. Attach the Adjustable Wall Channel to the wall using 3 x 30mm Screws.
 9. Insert the Side Pillar into the Wall Channel.
 10. Adjust the position of the Bath Screen Assembly until it is Level (Parallel) with the bath.
 11. From Inside of the Bath Screen Assembly, make a mark in the Wall Channel approx' 100mm from the Top. Note: The Wall Channel design, allows for Shower Screens to be adjusted so that they can be used on wall surfaces that are not vertical. When marking the hole position, please check to ensure that the drilled hole will go through both the Wall Channel and the Side Pillar.
 12. Using a 3.2mm diam' HS twist drill bit, drill 1 Hole through the upper marked hole position. The hole must be drilled through the Wall Channel & Side Pillar until it reaches the centre. **DO NOT DRILL THROUGH BOTH SIDES**
 13. Secure the upper section of the Wall Channel to Side Pillar by using 1 x Inner Screw Support Cup and 1 x 10mm Screw. **DO NOT OVER TIGHTEN**
 14. Ensuring that the Bath Screen is still aligned as required, mark the position of the lower bath screen screw position approx' 100mm from the bottom of the Wall Channel.
 15. Repeat steps 11 & 12 for lower bath screen screw position.
 16. Mark the centre support screw position equally distanced between Top & Bottom Screws and Repeat steps 11 & 12.
 17. Assemble the screw covers x3 onto the inner screw support cups.
 18. Fit the Bottom Water Seal (See Fig 15 on opposite page) and fit to lower edge of Screen.
 19. Measure the required length of the Top Bar and cut to length. **Note: Cut the open end of the bar only.** The forward end of the bar is already pre-drilled, so the length of the bar needs to be measured from this point.
 20. Mark the position of the Top Bar location to the wall. Using a 4mm Masonry Drill Bit, Drill 1 x 35mm deep hole in the marked screw positions on the wall.
 21. Insert 1 x wall plug into the hole and using a hammer knock it in until it is flush with the wall.
 22. Attach the 2nd Top Bar Fixing to the Wall (Position B) using a 30mm screw.
 23. Locate the Top Bar into the two previously assembled Top Bar Fixing Brackets. Insert a grub screw into Top Bar Fixing (A) and then mark the position of the 2nd hole in Fixing (B) through the grub screw hole. Remove the bar and drill a clearance hole in the position marked on the bar.
- Note: Only drill through the first wall thickness of the Top Bar.**
24. When the 2nd hole has been drilled in the Top Bar, relocate it to the two previously assembled Top Bar Fixing Brackets. Secure the Top Bar using the supplied Allen Key to tighten the Grub Screws in each of the Top Bar Fixings, these can be accessed from the bath side of the screen.