

AQ QUADRANT FITTING INSTRUCTIONS

- Ensure shower tray is level and check that adjustment sizes given are correct fitment to your application. Care must be taken when drilling into walls to avoid hidden pipes or electrical cables (Fig1).
- Assemble the frame by fixing the top and bottom rails to the fixed glass side panels and fix in position using 40 mm screws as in (fig 2).
- Fit glass clamps using 10 mm flat head screw (fig 3) and fit rubber door stops using 10 mm roundhead screws (Fig 4). The bottom gasket can be fitted at this point (Fig 5).
- Take wall posts and set 15 mm in from edge of tray, using a spirit level ensure wall posts are vertical and plumb (fig 6) mark hole positions (fig7), remove and drill holes and fit wall plugs.
- Slide wall posts onto either side of the frame, carefully lift frame into position and fix to wall using 30 mm screws ensure screw collar are fitted to the screw beforehand. Taking care not to scratch the unit mark and drill two 3.2 mm holes 150 mm from top and bottom on the inside of the enclosure through the wall posts and frame (fig 8) and secure with 10 mm screw again ensure the screw collar is in place.
- Fix top wheels to the glass doors by unclipping and lowering the cover cap, undo the retaining nut and fix through the holes in the glass re-tighten (fig 9) (final adjustment can be made by slackening the nut when assembly of unit is complete).
- Fix bottom wheels into position by disassembling wheel assembly and placing plastic saddle over the glass and tighten in position through the hole in the glass, place spring over spigot within wheel housing (see sketch A) and slide wheel onto the plastic saddle and re-fit cover cap (Fig 10).
- Hang door onto top rail making sure that the wheels are in the channel (fig 11), then from the outside push down on the spring loaded wheels and clip into position (fig 12). Finish by fitting handles supplied.
- Measure and trim to length the magnetic seals and clip onto outside edge of the glass doors.
- Measure and trim to length the vertical water seals and clip into position onto the glass doors and glass side panels.
- Finish off by fitting door handles, screw cover caps and running a bead of silicone along the outside between bottom rail and shower tray and frame work. **(DO NOT SEAL ON THE INSIDE OF THE ENCLOSURE).**

If the door does not run true, final adjustment can be made adjusting the top wheels by slackening the retaining nut and sliding the wheels up or down accordingly.

Figure 1



Figure 2



Figure 3



Figure 4



Figure 5



Figure 6



Figure 7

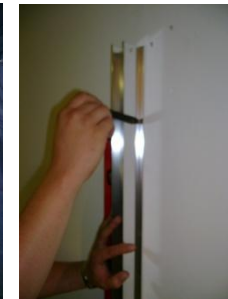


Figure 8



Figure 9



Figure 10




Figure 11




Figure 12




AQ QUADRANT FITTING INSTRUCTIONS

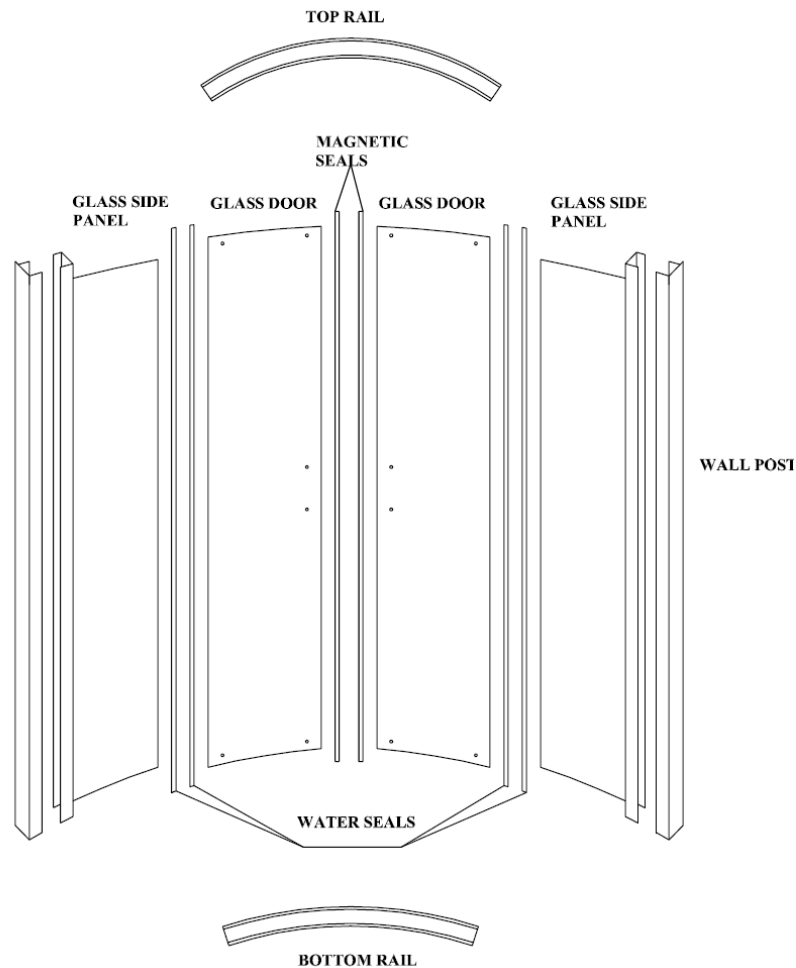

AQ QUADRANT PARTS LIST		
1		DOOR STOPS X 8
2		10 mm SCREWS FOR DOOR STOPS X 8
3		GLASS CLAMPS X 4
4		GLASS CLAMP SCREWS X 4
5		WALL CHANNEL COVERS X 2
6		10 mm SCREWS FOR X 4
7		30 mm SCREWS X 6
8		WALL PLUGS X 6
9		40 mm SCREWS X 8
10		WALL CHANNEL COVERS X 2
11		SCREW COVER CAPS X 10
12		INNER SCREW COLLARS X 10
13		DOOR HANDLE ASSEMBY X 1
14		DOOR HANDLE ASSEMBY X 1
		TOP WHEEL ASSEMBLY X 4
		BOTTOM WHEEL ASSEMBLY X 4
		VERTICAL WATER SEAL X 4
		MAGNETIC SEAL X 2
		BOTTOM SEAL X 2

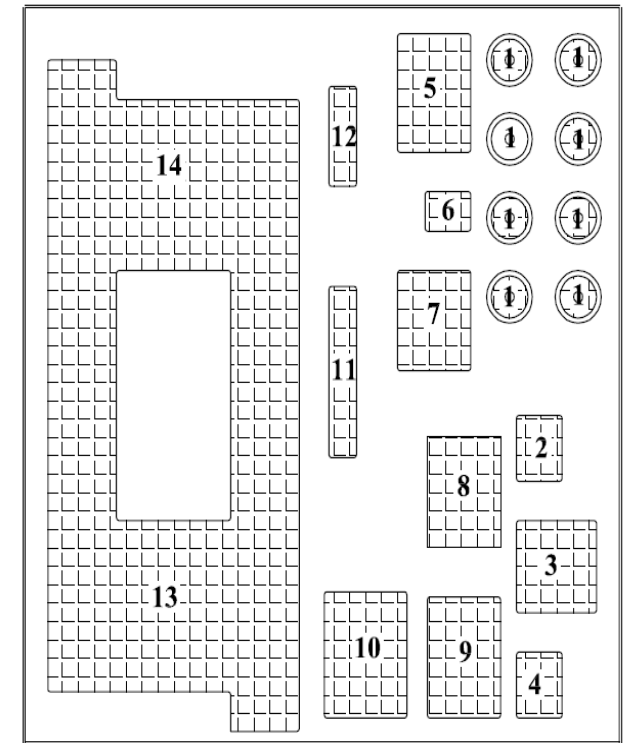

SKETCH "A"

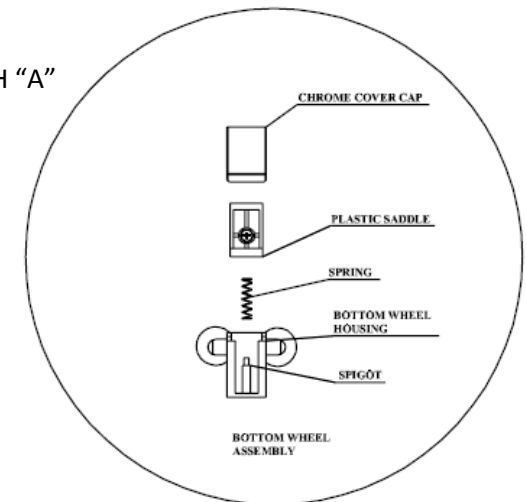

Lifetime Guarantee

To qualify your product for the manufacturers guarantee please download and complete the guarantee form within 14 days of your purchase, and post with a copy of your receipt. Form can be found at www.nikoltd.com/information/terms-and-conditions.php