



SHOWER TRAY

Rectangle Shower Tray

1000mm x 700mm x 35mm 1000mm x 760mm x 35mm 1000mm x 800mm x 35mm 1000mm x 900mm x 35mm

ON FLOOR INSTALLATION

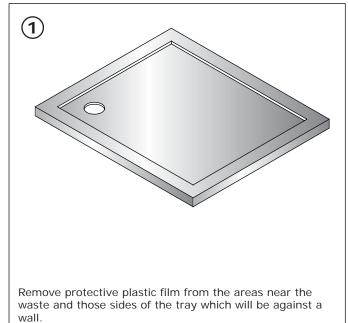


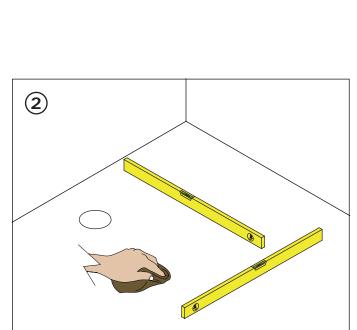


fools required


Ø3.5mm


Ensure that the location of the shower tray is firm, level, and clean.

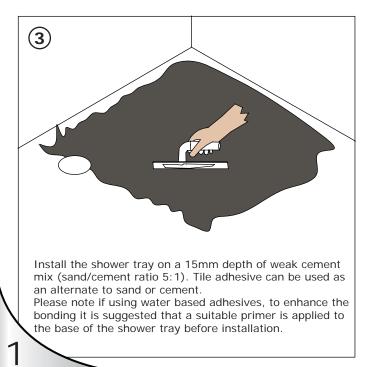


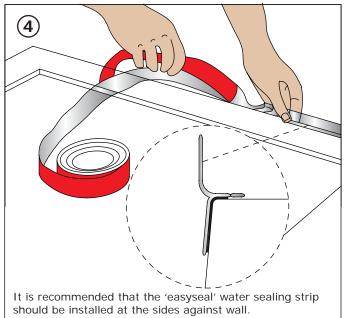

For the detailed installation method, please refer to the "Waterproof Sealing Strip instruction".

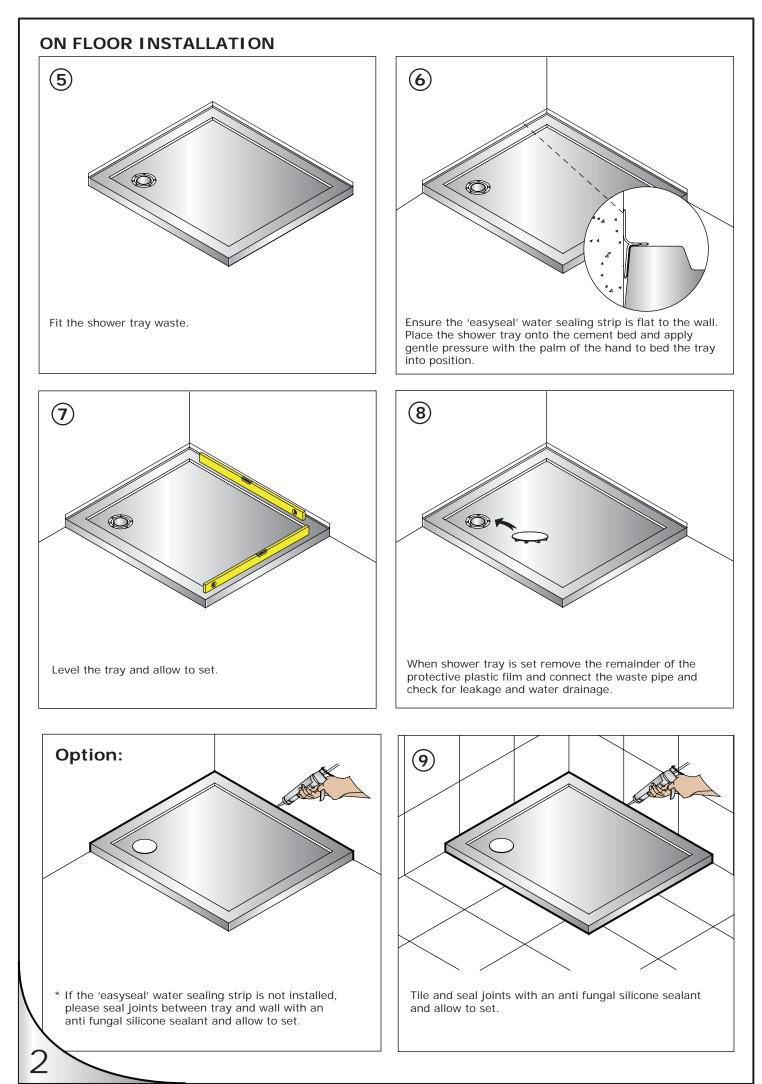

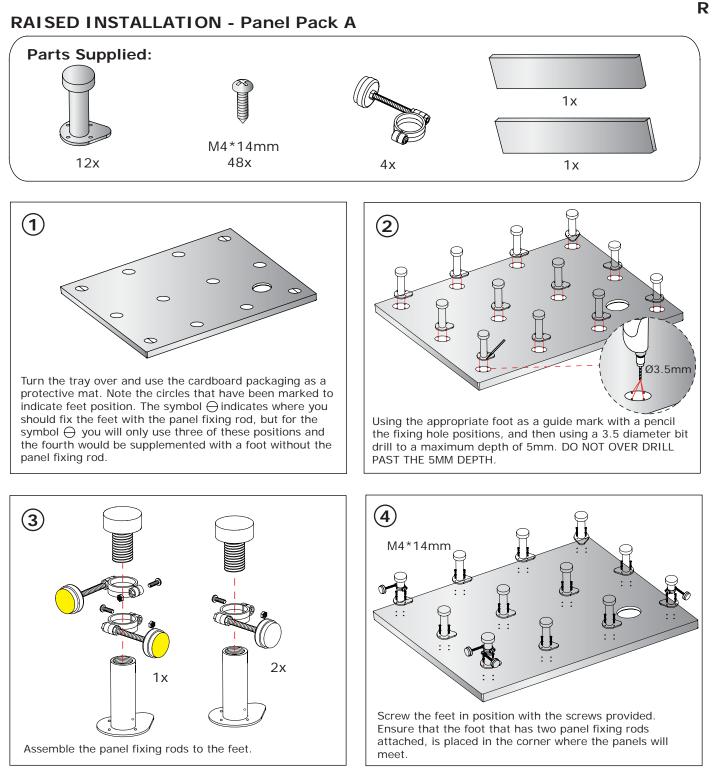

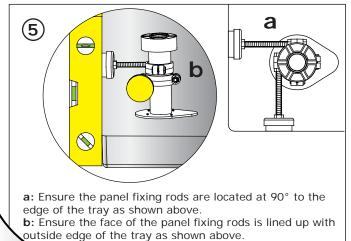



3

100mm 100mm


When all of the feet have been fitted, the feet in the corner positions should be adjusted to 100mm.

RAISED INSTALLATION

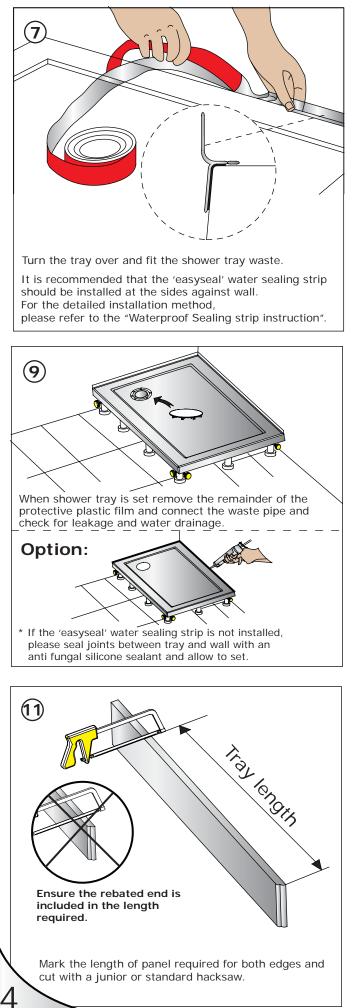


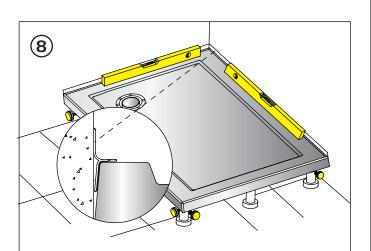

Ensure the 'easyseal' water sealing strip is flat to the wall. Place the tray into position and level both ways using the legs. After the tray has been levelled adjust all the inner feet to stabilise the tray. When level fix these legs to the floor with silicon sealant or 'no more nails' type adhesive.

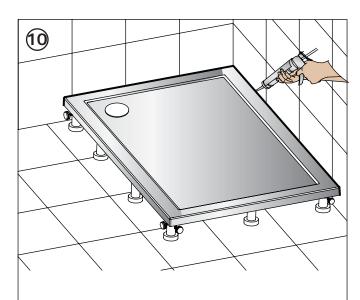

Tile the wall and seal joints with an anti fungal silicone sealant and allow to set.

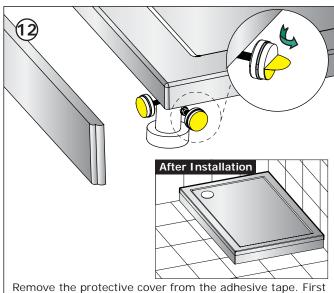

Remove the protective cover from the adhesive tape. First fix the rebated panel pushing it firmly on to the adhesive pads. Then fix the remaining panel in the same manner.



SHOWER TRAY INSTRUCTION

Care & Maintenance

Providing the shower tray has been correctly installed, difficulties should not be encountered. If any maintenance is required then it must be carried out by a qualified Plumber or Engineer.

It is advised that the shower tray is cleaned regularly, to remove any insoluble products. Hot soapy water should be used and then the tray should be wiped. Cleaners of gritty or abrasive nature should never be used.

The surface of this shower tray has good resistance properties to acids but should not come into contact with alkalis or organic solvents, such as caustic soda, dry cleaning agents and paint strippers.

Minor scratch marks can be removed with metal polishes.