



# SHOWER TRAY INSTRUCTION Rectangle Shower Tray


1500mm x 700mm x 35mm 1500mm x 760mm x 35mm 1500mm x 800mm x 35mm


1600mm x 700mm x 35mm 1600mm x 800mm x 35mm 1600mm x 900mm x 35mm 1700mm x 700mm x 35mm 1700mm x 760mm x 35mm 1700mm x 800mm x 35mm 1700mm x 900mm x 35mm 1700mm x 1000mm x 35mm

### ON FLOOR INSTALLATION

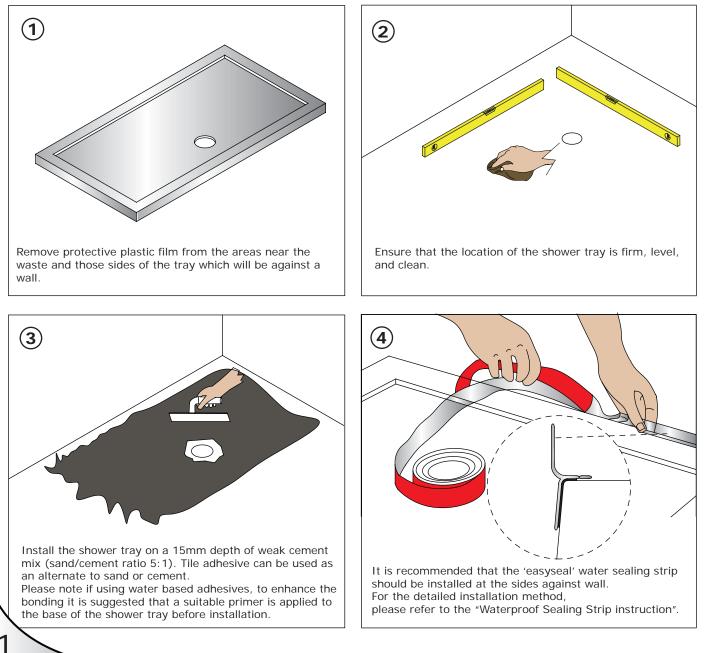


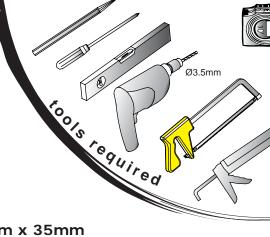


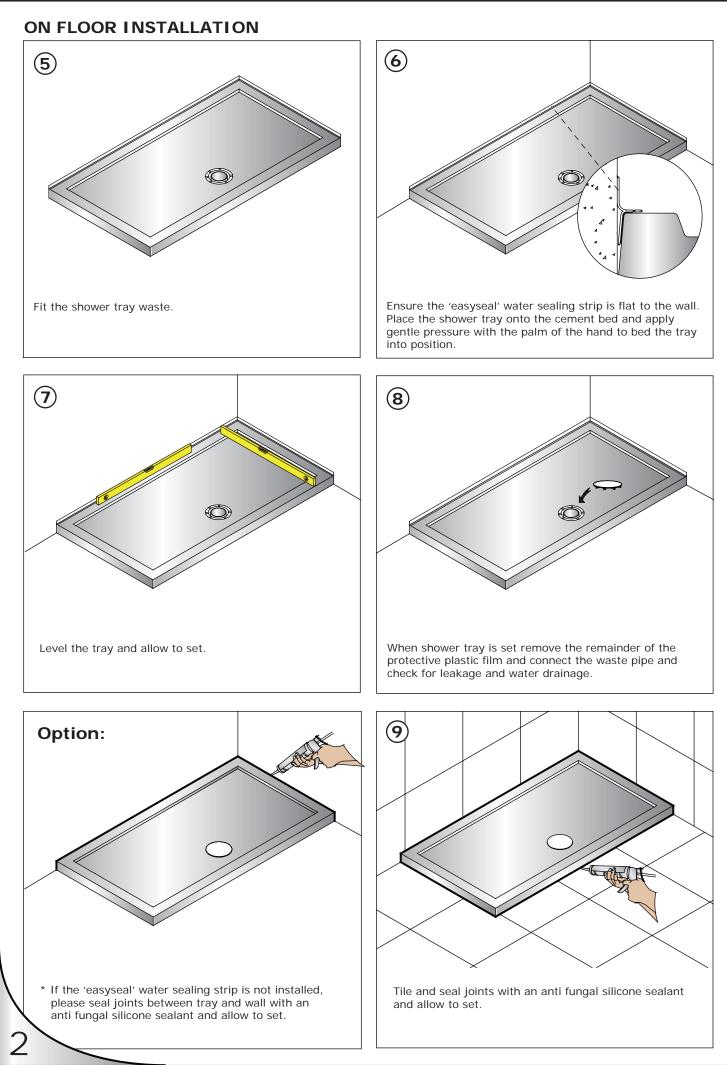

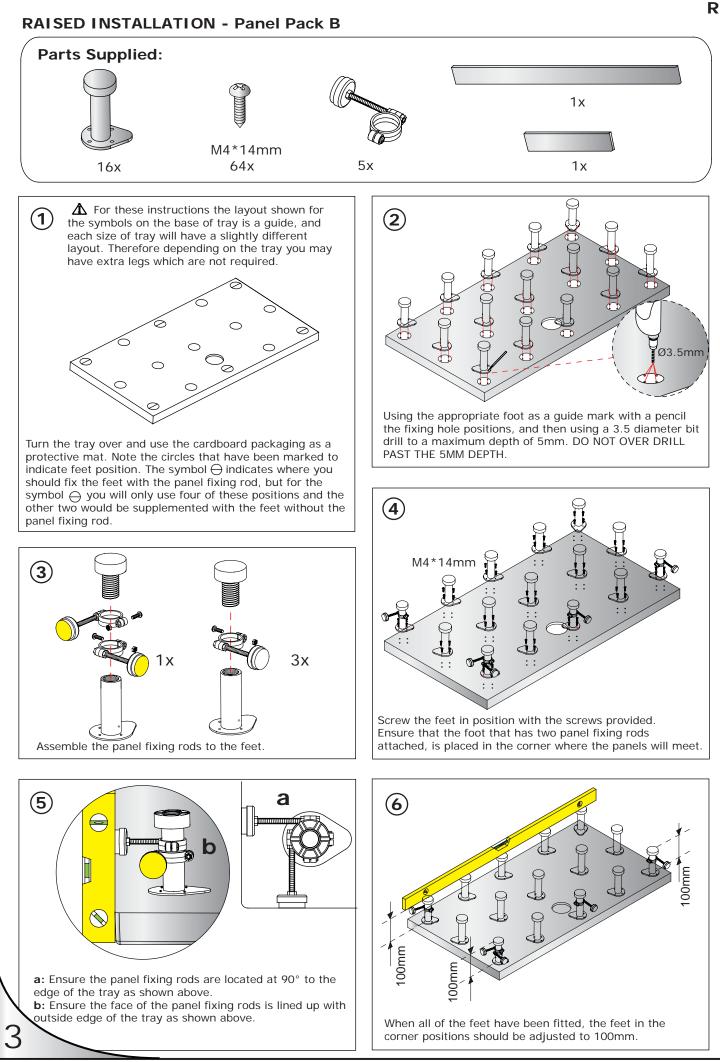


#### **RAISED INSTALLATION**

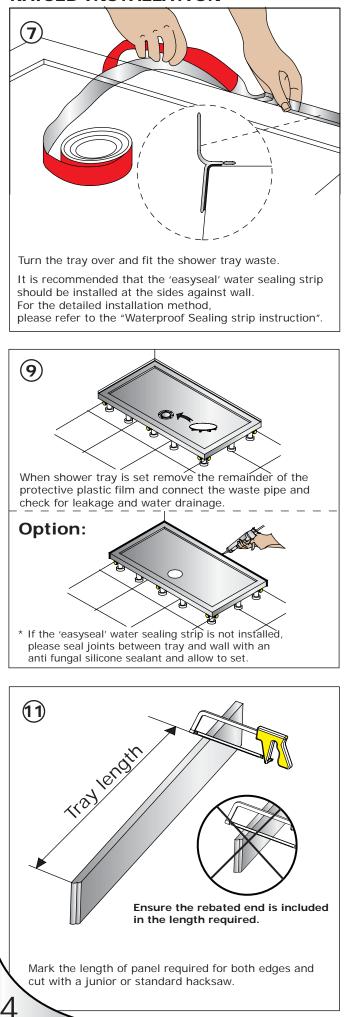


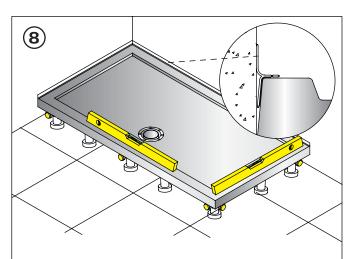

Ensure the 'easyseal' water sealing strip is flat to the wall. Place the tray into position and level both ways using the legs. After the tray has been levelled adjust all the inner feet to stabilise the tray. When level fix these legs to the floor with silicon sealant or 'no more nails' type adhesive.

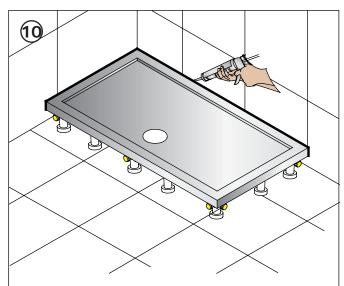

Tile the wall and seal joints with an anti fungal silicone sealant and allow to set.

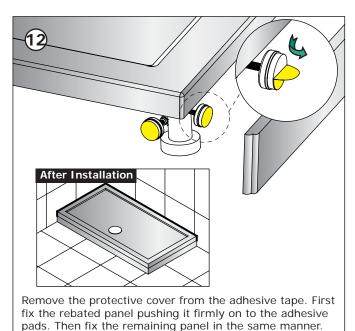



## SHOWER TRAY INSTRUCTION

### **Care & Maintenance**

Providing the shower tray has been correctly installed, difficulties should not be encountered. If any maintenance is required then it must be carried out by a qualified Plumber or Engineer.

It is advised that the shower tray is cleaned regularly, to remove any insoluble products. Hot soapy water should be used and then the tray should be wiped. Cleaners of gritty or abrasive nature should never be used.

The surface of this shower tray has good resistance properties to acids but should not come into contact with alkalis or organic solvents, such as caustic soda, dry cleaning agents and paint strippers.

Minor scratch marks can be removed with metal polishes.